



Display System Assembly

Use thread locking compound on all screws and inserts.
Use epoxy when locking supports in the top and bottom channels.
Screw studs into picture supports using thread locking compound.
Tighten all parts securely.

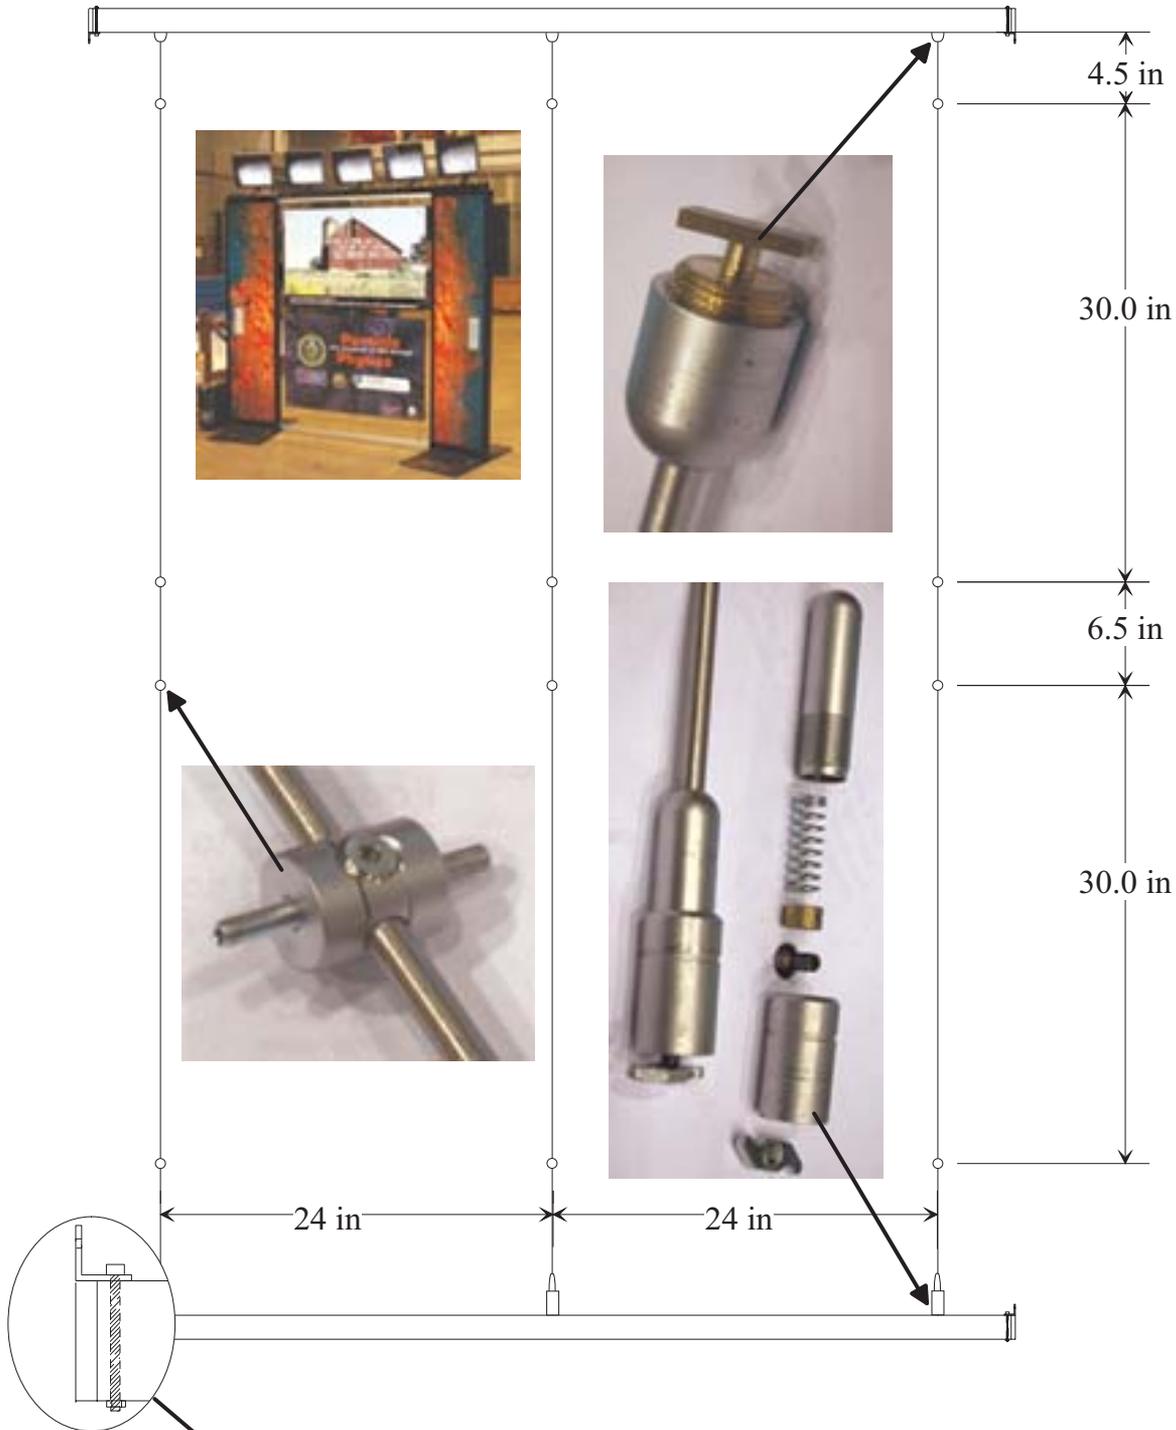

Drill mounting hole through channel and attach "L" bracket with stainless or plated M5 x 40 socket head bolt & nut.



Top View of "L" bracket